 


BORYOZA

WIZMATE FX-NIK Z

Autofocus Lens Mount Adapter User Manual

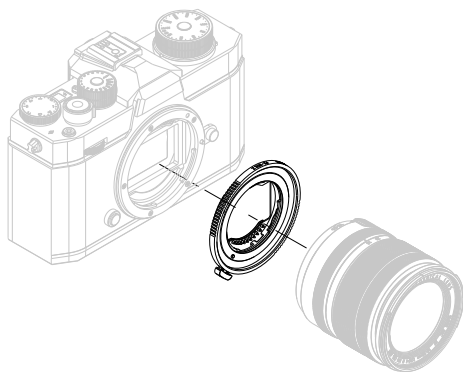


Safety Precautions

- 1、Ensure full installation and proper engagement of the lock when mounting the adapter to the camera and the lens to the adapter.
- 2、Power off the camera before mounting or removing the adapter to avoid electrical damage.
- 3、Keep hands away from all metal contacts to prevent static damage to internal circuitry.
- 4、Keep the adapter dry; never immerse it in water.
- 5、No disassembly; tampering will void normal functions.
- 6、Protect the unit from drops and heavy impact.
- 7、Align the positioning marks before installing the upgraded exclusive lens cap for accurate fitting.

FX Lens Aperture Ring Operation


This product offers different control functions for two types of FX lenses with distinct aperture rings. Please confirm your lens type before use.

1、FX lenses with 360° adjustable aperture ring

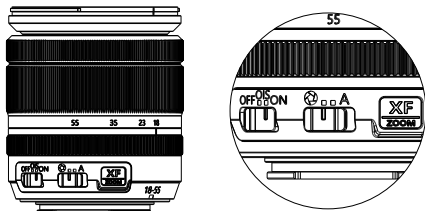


This ring can be customized via the Z camera menu path: Custom Setting Menu > Controls > Custom Controls. Recommended assignments: Aperture or Exposure Compensation.
Switch to Manual Aperture mode to enable this function.
The control ring is inactive under "A" auto mode.

2、FX lenses with marked aperture scale on the aperture ring

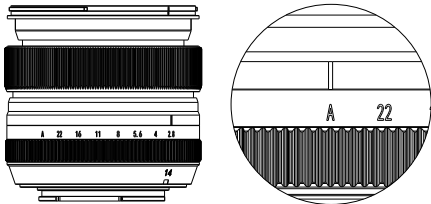

For this type of lens, the aperture value can be directly adjusted on the aperture control ring. When a specific aperture value is selected on the ring, the camera will control the aperture under Aperture Priority (Av) or Manual (M) mode.If you wish to use auto aperture, set the camera exposure mode to P or S, and turn the lens aperture control ring to position "A".Focusing performance will deteriorate at small apertures (F16, F22) under low light.


Component Names

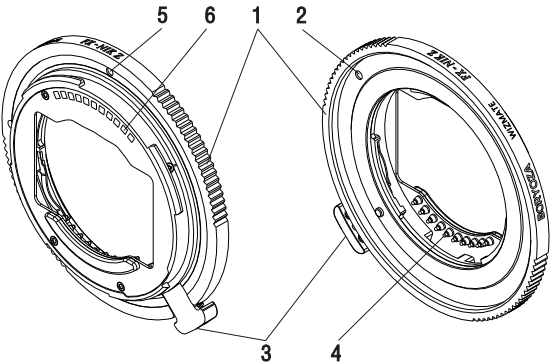


- 1、Adapter Body
- 2、FX Lens Installation Mark (Red)
- 3、FX Lens Release Button
- 4、FX Lens Electrical Contacts
- 5、Nikon Z Camera White Alignment Mark
- 6、Nikon Z Electrical Contacts

Installation

- 1、Align the white mark (camera side of adapter) with the camera mounting mark.
- 2、Turn the adapter counterclockwise until a click is heard as the lock pin engages the notch.

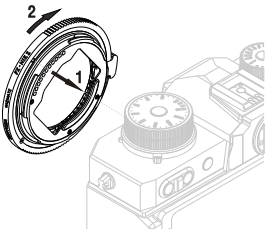


- 3、Match the lens mark to the red mark on the adapter.
- 4、Turn the lens clockwise until the locking pin clicks into the lens notch.

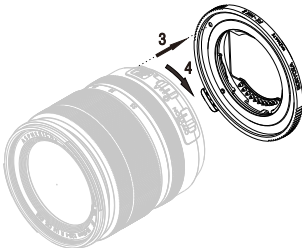


Removal

- 1、Push the release button inward.
- 2、Turn the lens counterclockwise for release.
- 3、Pull out the lens.

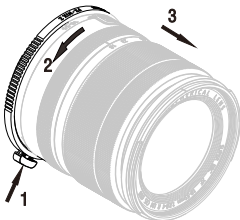

Firmware Upgrade

- 1、Match the white mark of the adapter to the white mark on the dedicated upgrade lens cap.
- 2、Turn the adapter counterclockwise until locked.
- 3、Connect the assembly to a computer via a Micro USB cable (cable not included; user must provide separately).
- 4、The device will appear as a “BORYOZA” flash drive. Copy the firmware file.
- 5、Eject the drive to complete the upgrade.

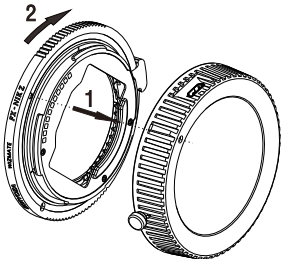

⌘ Note: For the latest product firmware, please visit the official BORYOZA website: www.boryoza.cn